

# **Wireless ADSL 2/2+ Router**

**Quick Installation Guide**

**KM-410WG**

## ***Safety Cautions***

- Do not use the ADSL WiFi Router in high humidity or high temperatures.
- Do not use the same power source for the ADSL Router as other equipment.
- Do not open or repair the case yourself. If the ADSL WiFi Router is too hot, turn off the power immediately and have it repaired at a qualified service center.
- Avoid using this product and all accessories outdoors.
- Place the ADSL WiFi Router on a stable surface.
- Only use the power adapter that comes with the pack-age. Using a different voltage rating power adaptor may damage the Router.

## ***Package List***


- CD-ROM x 1 Containing the user's manual, quick installation guide
- Quick Installation Guide
- ADSL Splitter
- Power Adapter
- RJ-11(ADSL) cable x 2
- RJ-45 cable x 1

*If any of the above items are missing or damaged, contact your local dealer for support.*

## Hardware Installation

Please connect the device to you computer as follow:

- If connecting to the splitter, connect the “Line” splitter to wall jack using one telephone cable
- Use another telephone cable to connect “Modem” port of the splitter and “LINE” port of the Router. The “Phone” port of the splitter can be use to connect the telephone by a telephone cable.
- Use Ethernet cable to connect “LAN” port of the Router and “Ethernet” port of your computer.

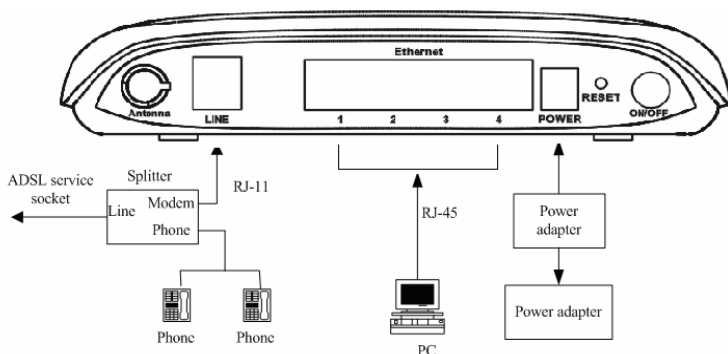

## ***Router Parameters***

*Setting* Configuring computer network card IP address

Configure your network card's TCP/IP properties to Obtain an IP address automatically from Router, or set the computer's IP with the same network mask of the Router.

**(For example: Router's default IP is 192.168.1.1)**

**Then you can set computer's IP to:192.168.1.x**

**The range for x is from 3 to 253**

## ***Web setting interface***

Open IE or Netscape Web browser, Input <http://192.168.1.1> (Router default IP address) in the address column, then click <ENTER> button, access the following setting interface:

Input user name and password, then click Login key to enter WEB setting interface.

**Default setting:**

**IP Address:** 192.168.1.1

**Subnet Mask:**255.255.255.0

**Username / Password:** admin / admin

After type right user name and password, the following window will pop up:

Wizard	Status	Wizard	LAN	WLAN	WAN	Advance	Admin	Diagnostic
Wizard								
Wizard	<h2>Wizard</h2> <p>This Wizard will guide you through the steps necessary to configure your DSL Router.</p> <p><b>Note:</b> This PVC will instead of the first original PVC.</p> <hr/> <h3>ATM PVC Configuration</h3> <p>The Virtual Path Identifier (VPI) and Virtual Channel Identifier (VCI) are needed for setting up the ATM PVC. Do not change VPI and VCI numbers unless your ISP instructs you otherwise.</p> <p>VPI: <input type="text" value="0"/> (0-255)</p> <p>VCI: <input type="text" value="35"/> (32-65535)</p> <p style="text-align: right;"><a href="#">Next &gt;</a></p>							

## Further Configuration

The above steps introduce simple installations and configurations for ADSL Router. For further configurations of WAN, Wireless, LAN, NAT, Security, Routing, DNS, and DSL etc, please refer to the user's manual in the CD. If you have other questions, please contact the local dealer or distributor where you purchased this product.